


CSP100/200
Projected Horizontal Slide



EASI-SERV PRODUCTS INC.

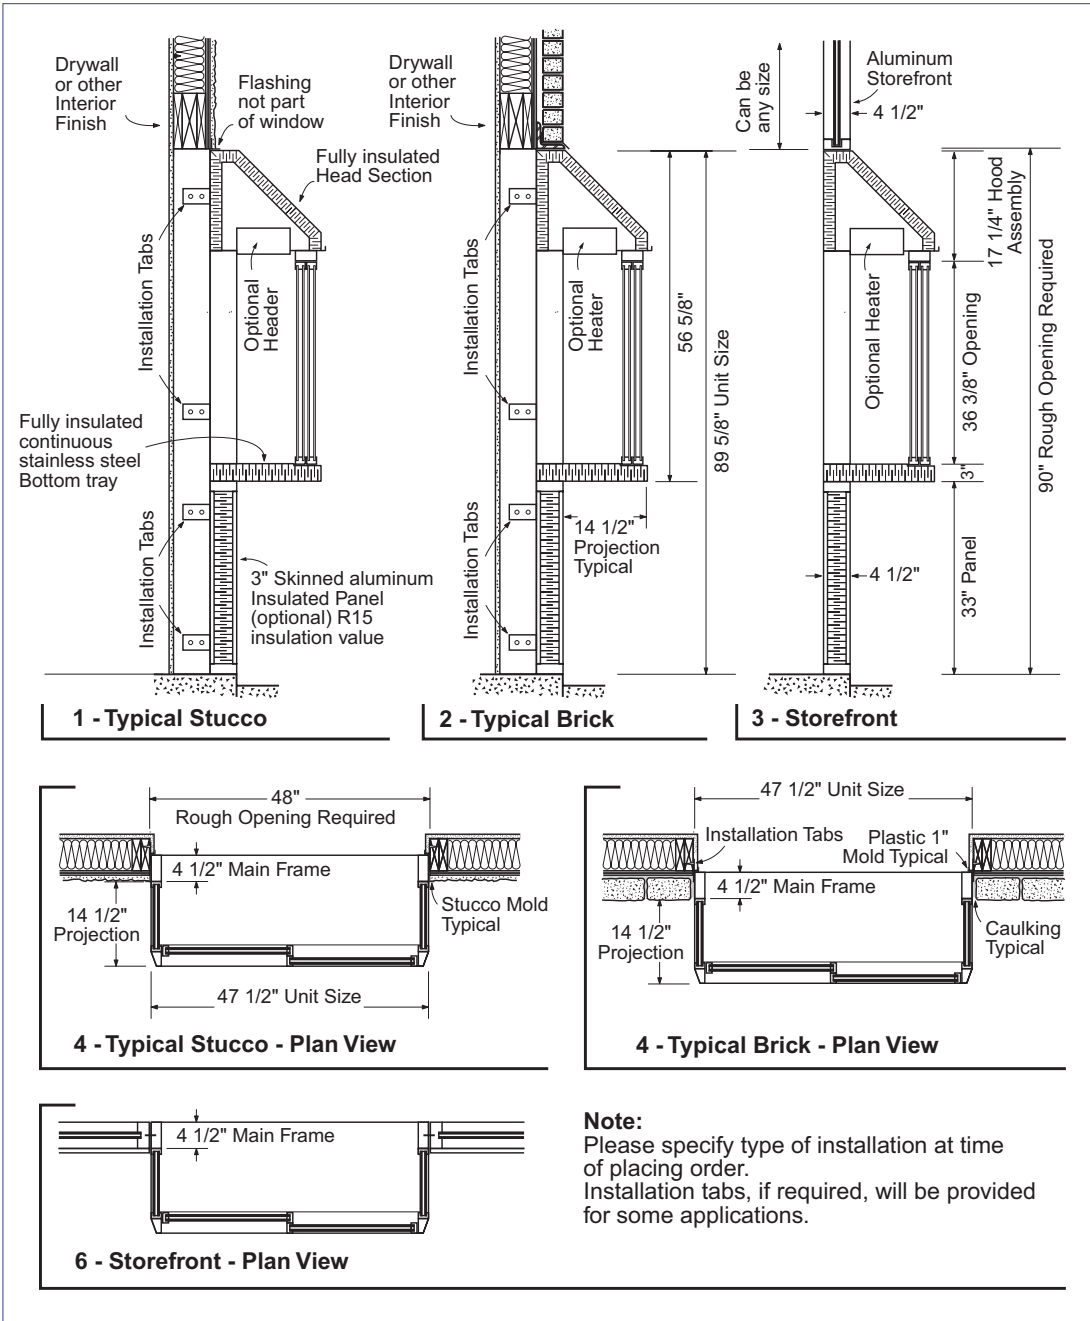

CSP 100/200
Installation Instructions

1. Drill two 7/32" holes in each vertical back jamb 6" from the stainless steel base and 6" down from the painted steel hood.
2. Level, plumb and shim pass thru window before fastening to building or structure.
3. Snap in flat aluminum panels (provided loose) to conceal fasteners.
4. Use silicone caulking around entire perimeter both inside and outside.

